


Streetlight Point-of-Disconnect Diagram

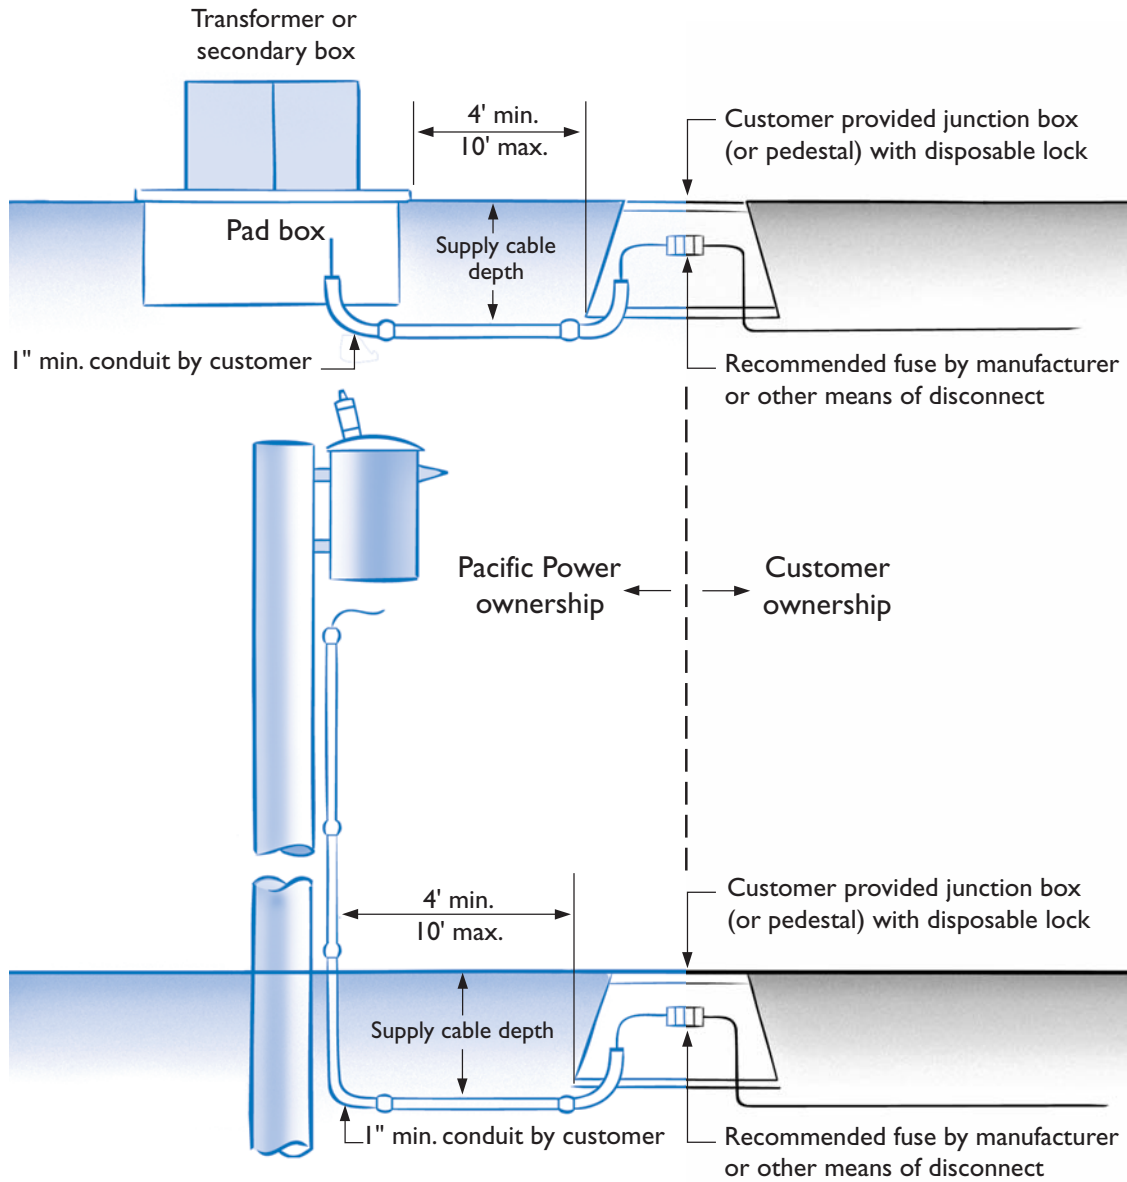

Customer is responsible for:

- Providing and installing a junction box or pedestal, conduit, fusing and customer-owned wire. The junction box or pedestal must be strong enough for incidental traffic areas
- Coordinating with Pacific Power on junction box or pedestal location and all digging within the vicinity of Pacific Power facilities
- Ensuring that construction of new or remodeled installations conform to applicable provisions of the NEC State Rules, as well as city and county codes

Pacific Power is responsible for:

- Installing and connecting wire from Pacific Power facilities to the point of disconnect.

